 


# *Assembly Instructions*


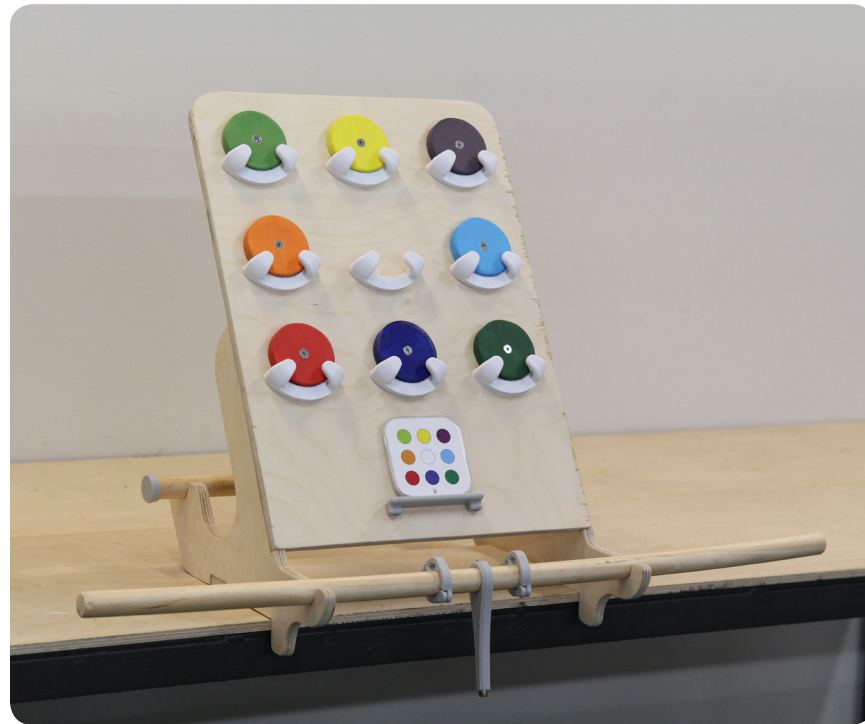


Fixperts project

By



Doron Azulay | Gil Zygmán

# Step 1

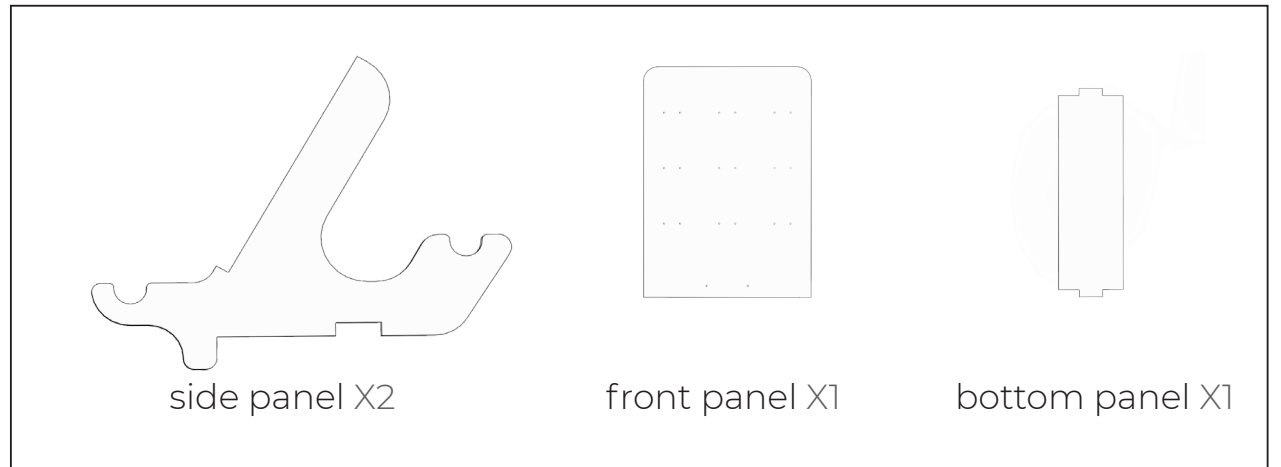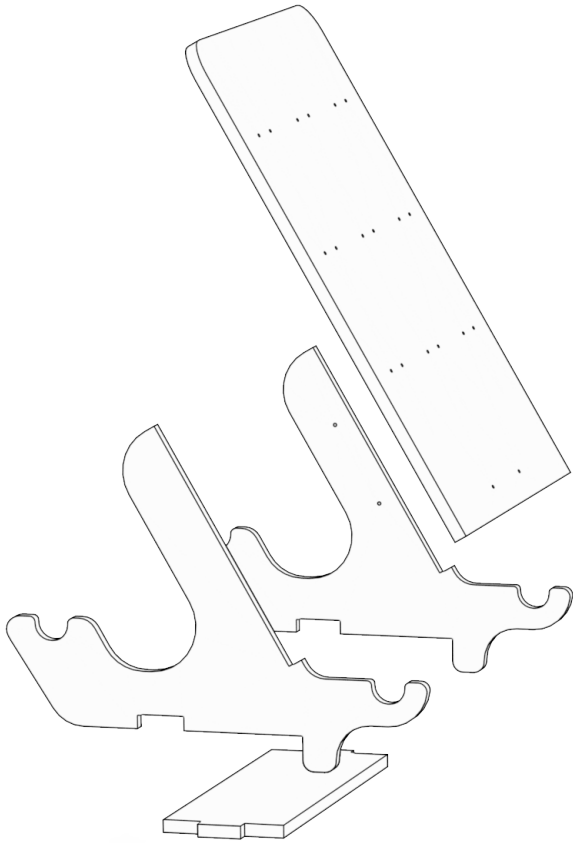



Glue the side panels to the bottom panel, then glue the front panel to the side panels

# Step 2

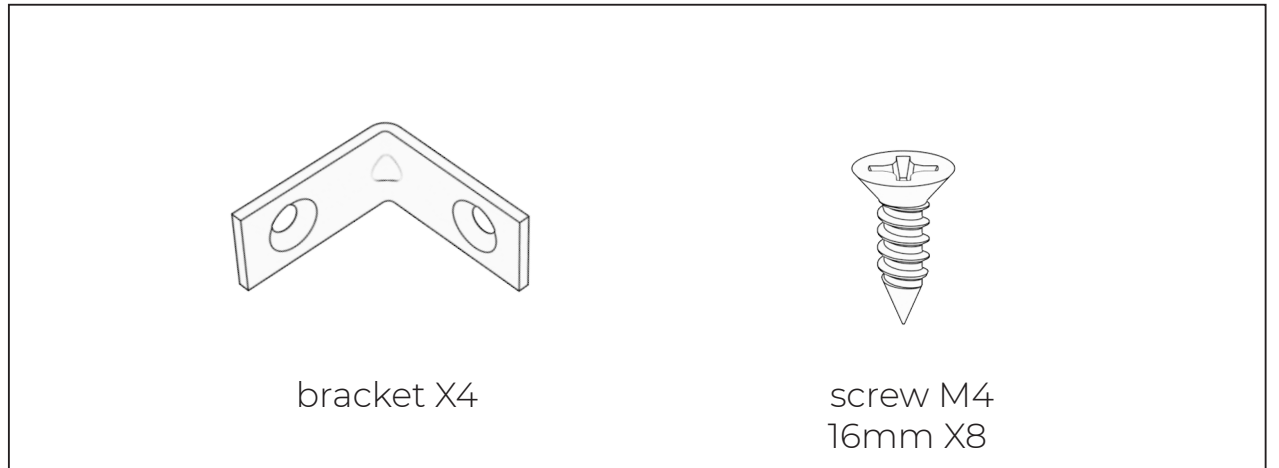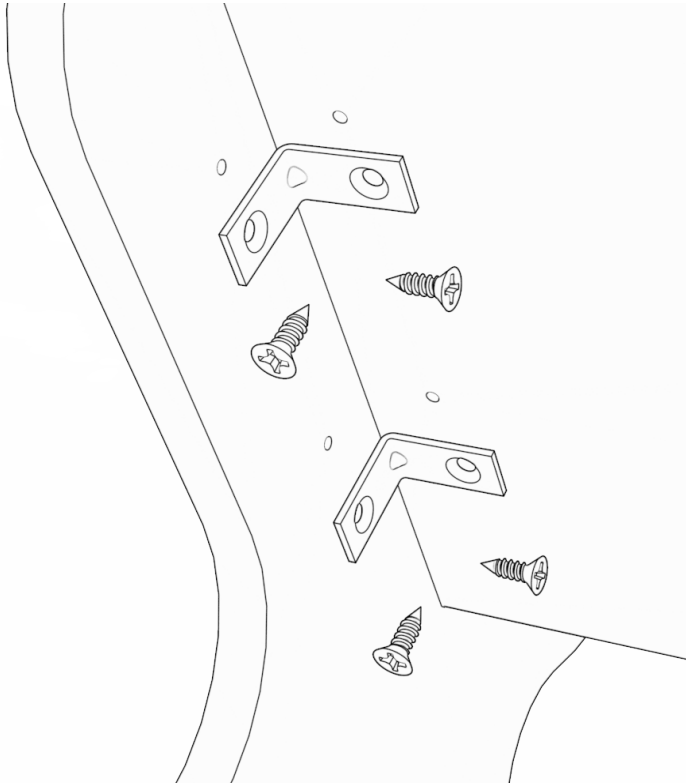



Screw the brackets to the front and side panel in order to strengthen the connections

# Step 3

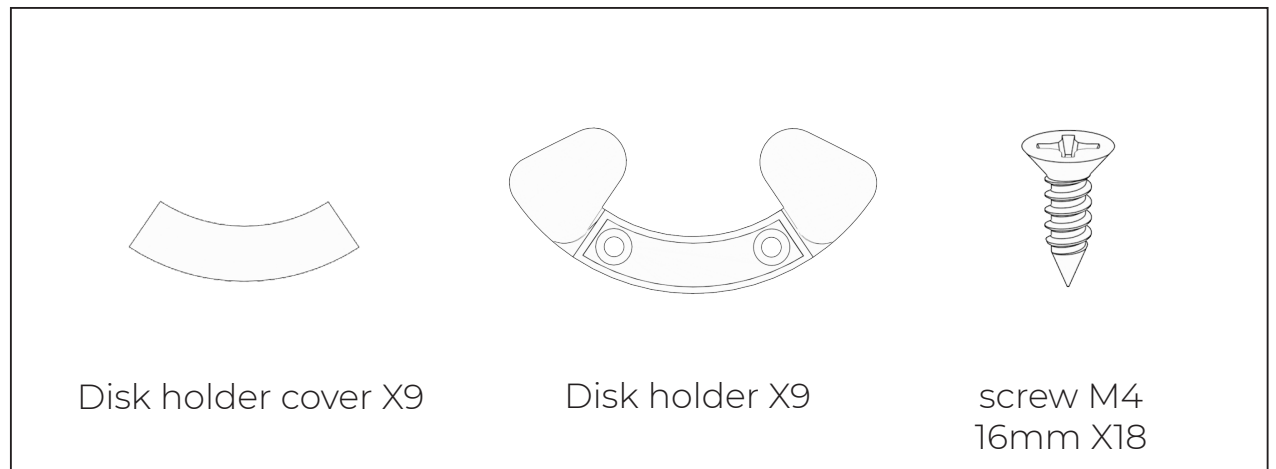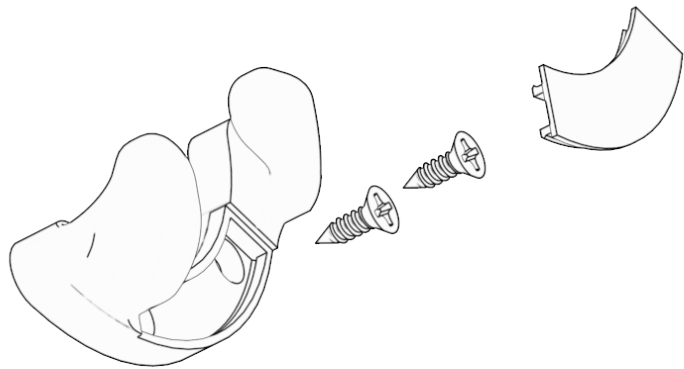



Screw the disk holder to the preparation holes in the front panel and then cover them

# Step 4

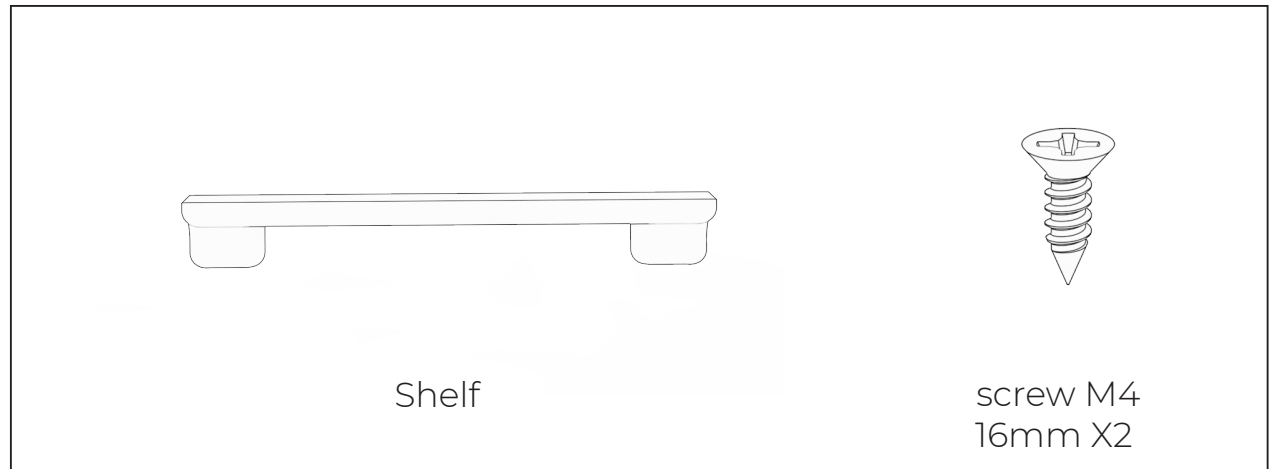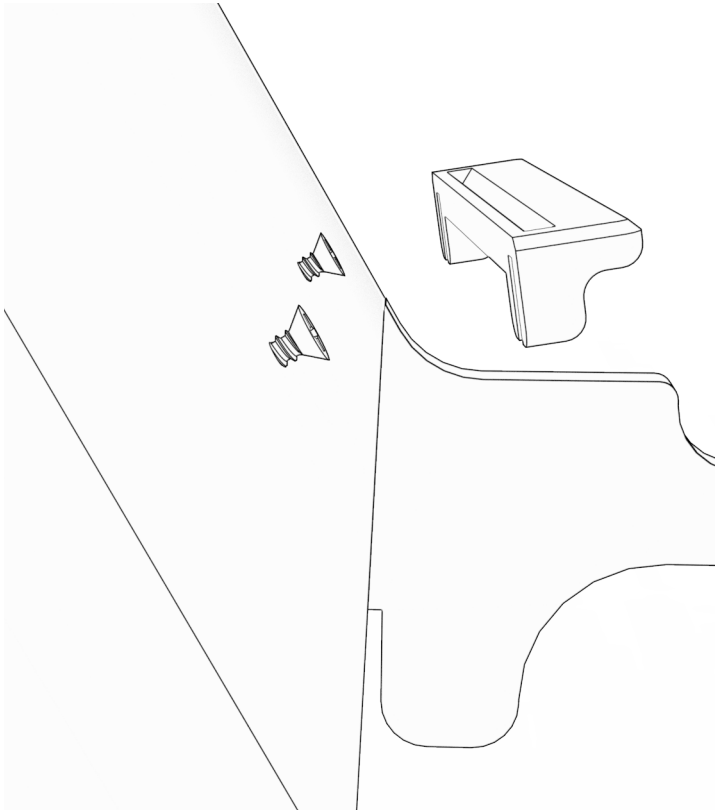



Connect the screws to the front panel in its central bottom part, leave their head protruded  
Thread the shelf on the screws' head

# Step 5

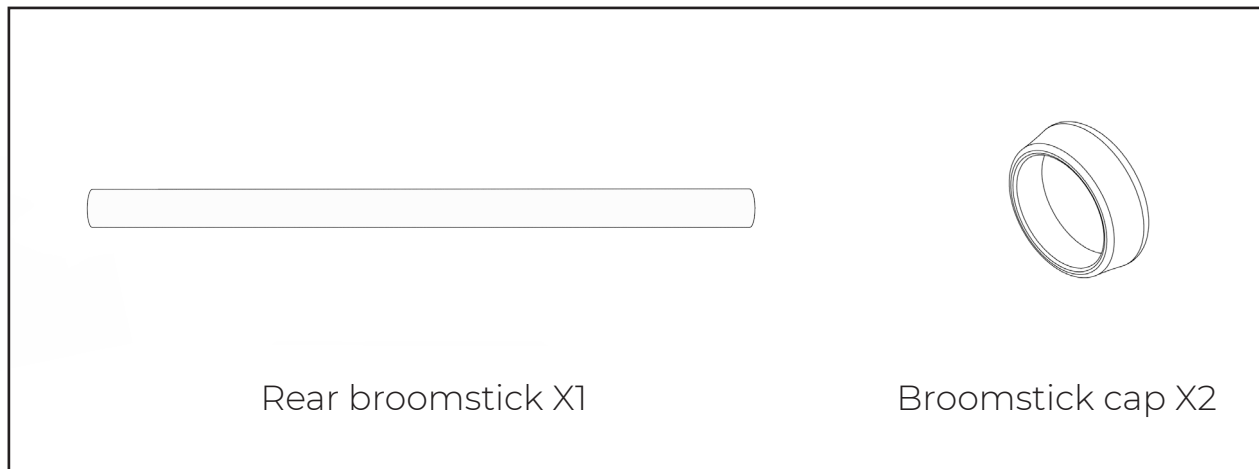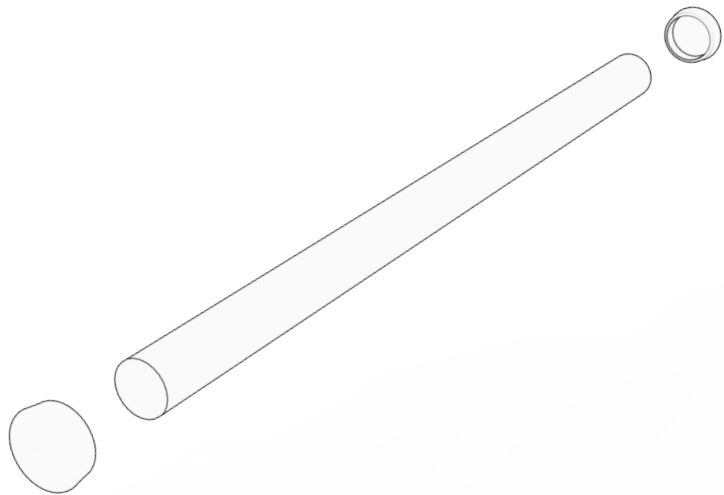



Close the rear stick with the caps and place it in the back of the device

# Step 6

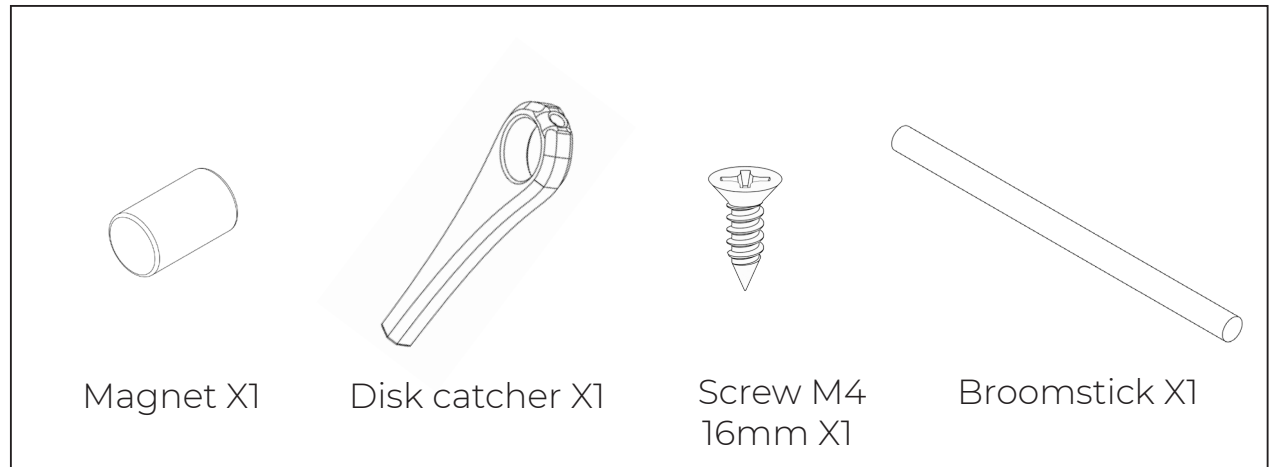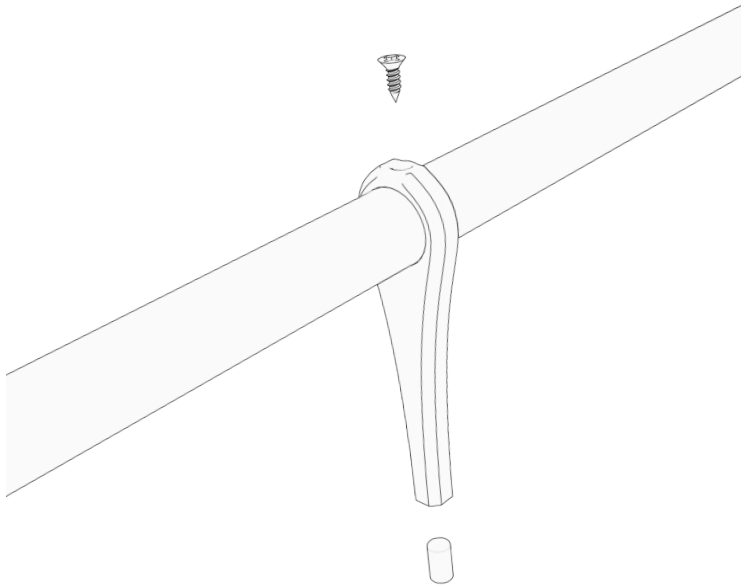

Thread the disk catcher in the middle of the stick and set it with a screw at the top, glue the magnet to the bottom of the catcher



# Step 7

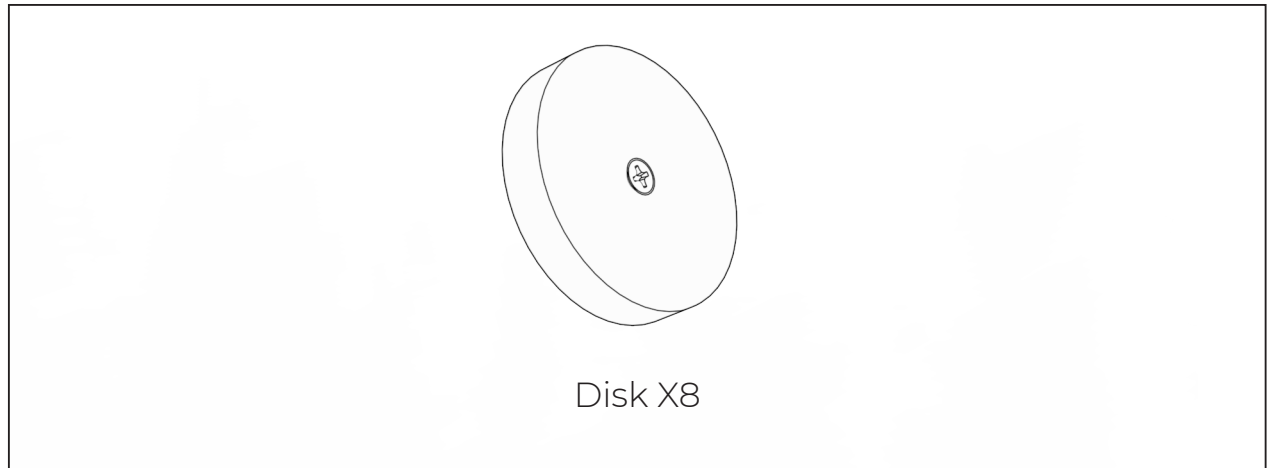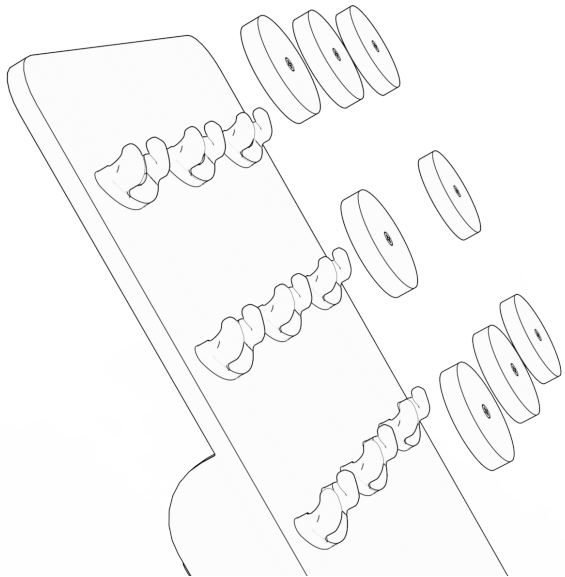

Put the disks in their place





# Step 8

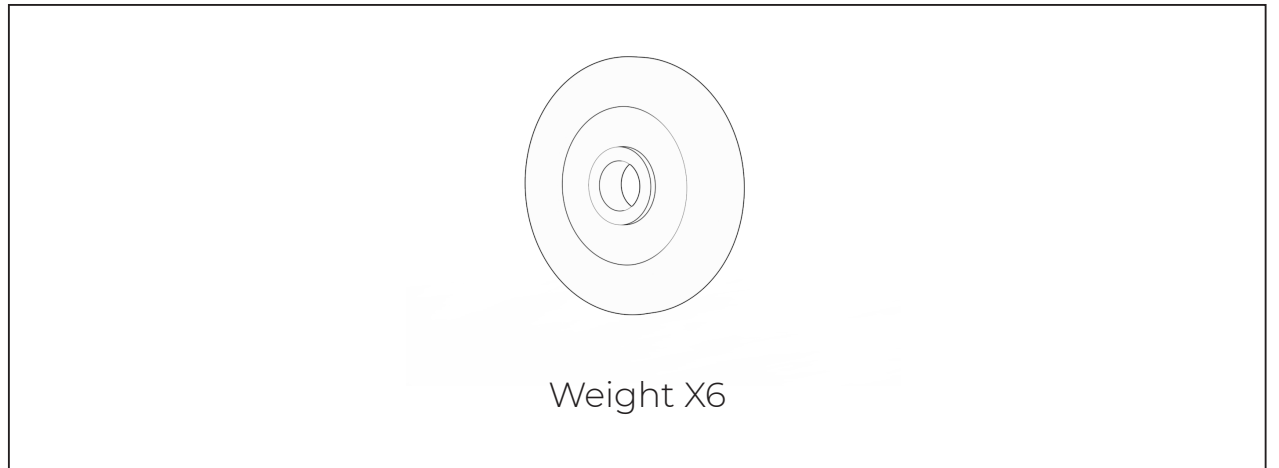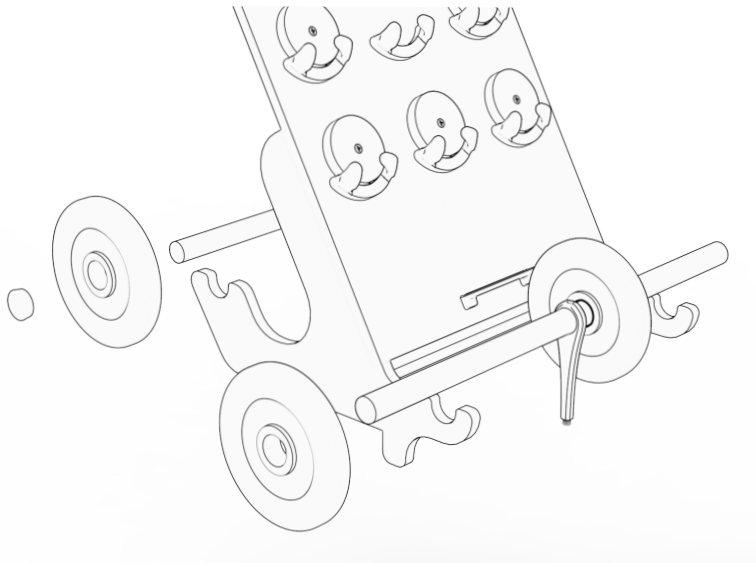

Put the weights in the front part of the device, and the spare weights in the back



# Step 9

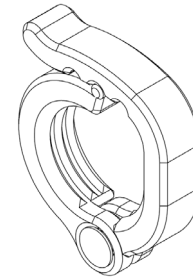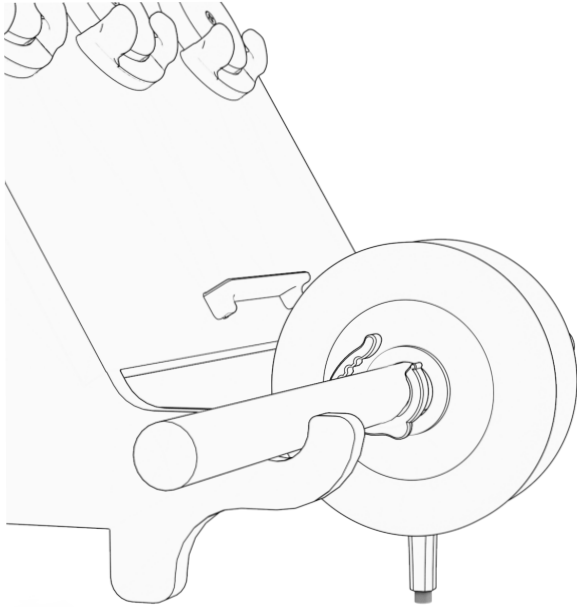

Weight stopper X2

Set the weights from both sides with the weight stopper clips for the safety of the user

# Step 10

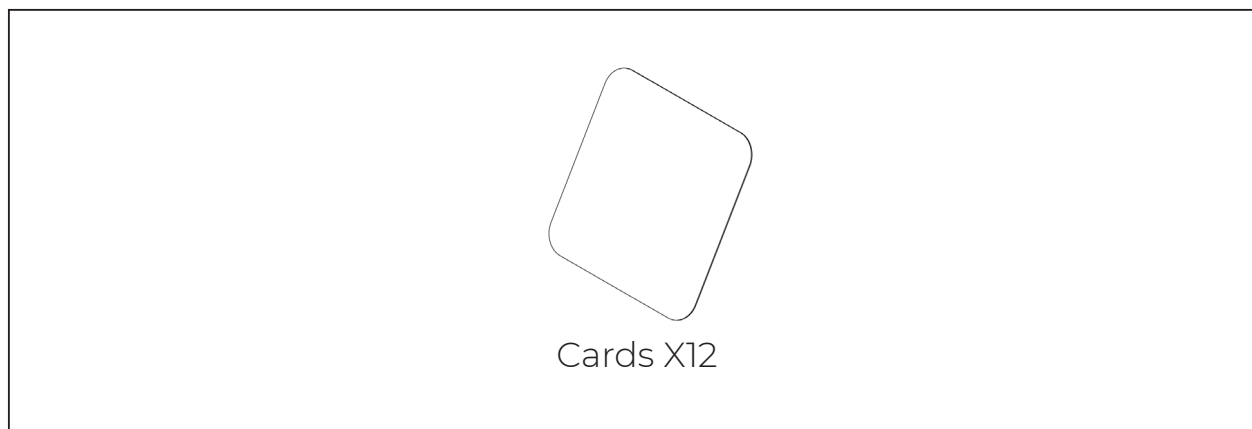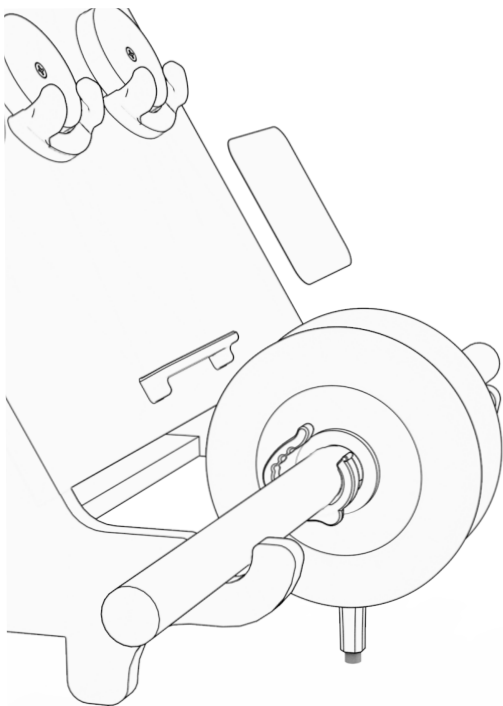

Put the playing cards in the shelf

# Done

