

C55-B5300 D.C. power jack removal

Keep screws sorted by step, and keep separate. They are the same size unless noted otherwise.


Remove bottom of case



1. Remove battery screws (2)
2. Slide battery out
3. Remove DVD screw (1)
4. Slide DVD out
5. Remove remaining screws (12)
6. Separate case bottom, starting at DVD receptacle, and
7. Work down front and back edges.
8. Lift and remove case bottom


License: Public Domain

Remove hard drive

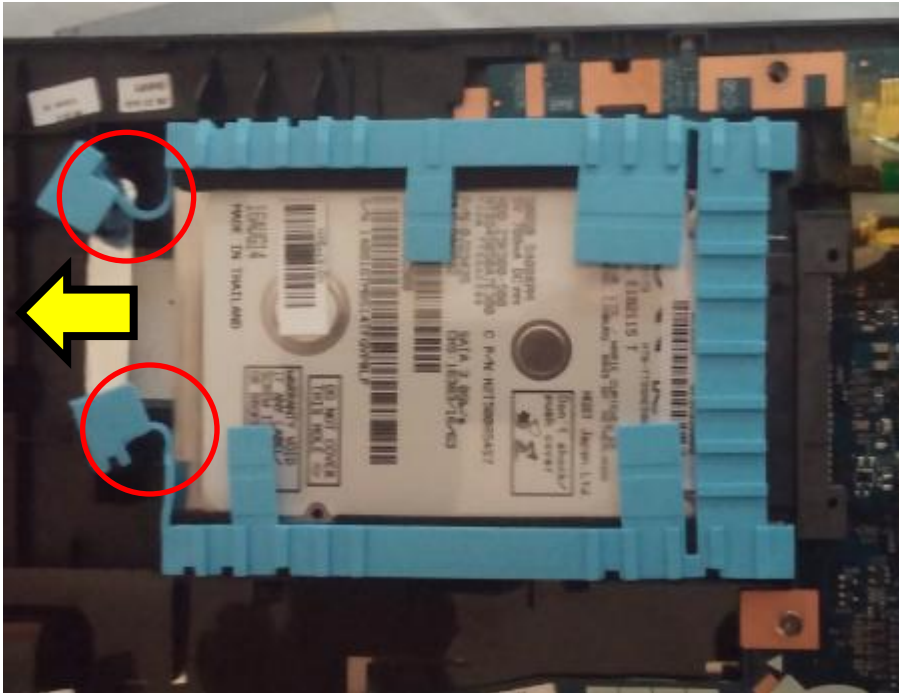

1. Pull up on shock mount tabs
2. Lift back of drive enough to clear tray
3. Slide out


Disconnect display hinge from base

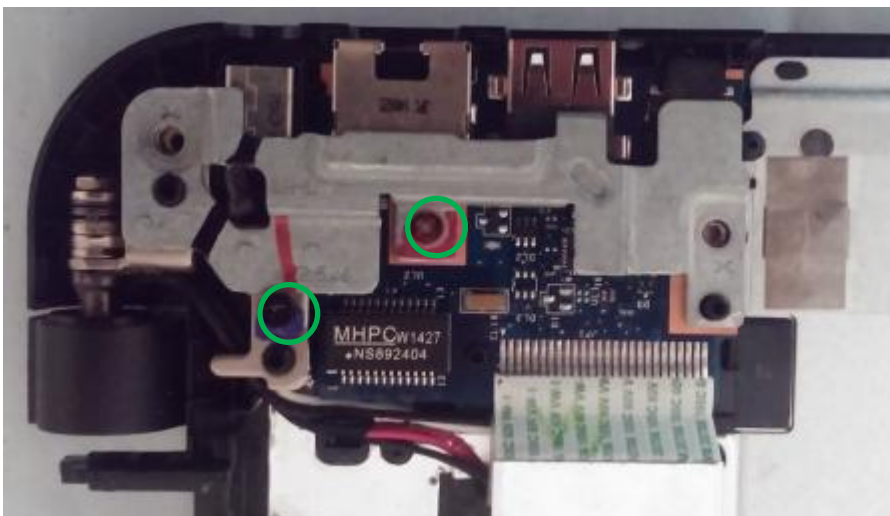

NOTE: These screws are different sizes. Mark position.

1. Remove screws on left display hinge (DVD side) (2)
2. Lift hinge


Disconnect power jack mini-board

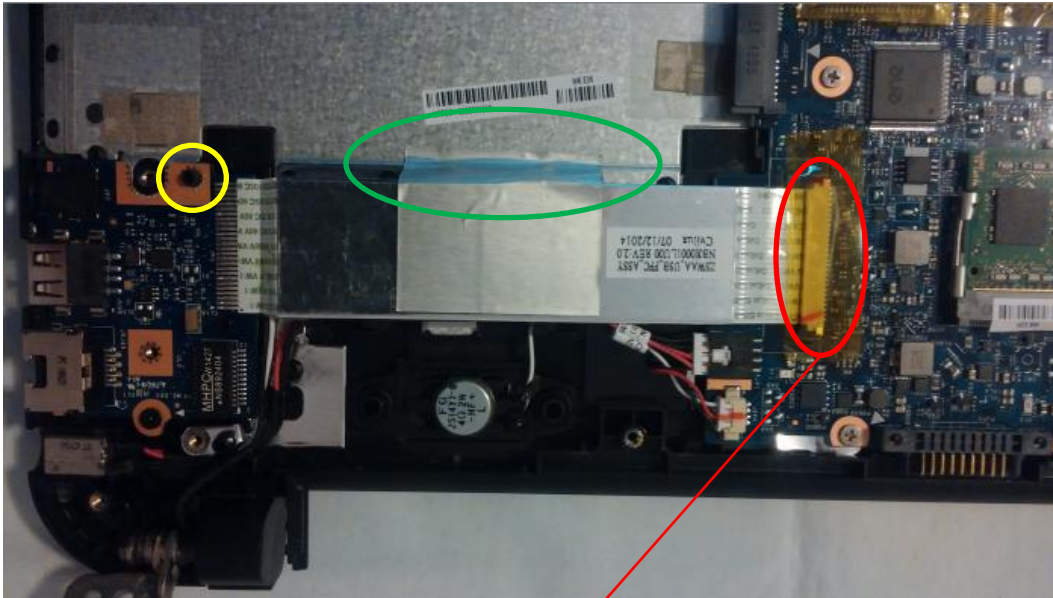


1. Remove yellow tape from mini-board ZIF connector and stick on metal plate for later replacement
2. Free silver tape from DVD deck
3. Remove screw from Power, LAN, USB mini-board (1)



4. Release ZIF connector
5. Slide flex cable out

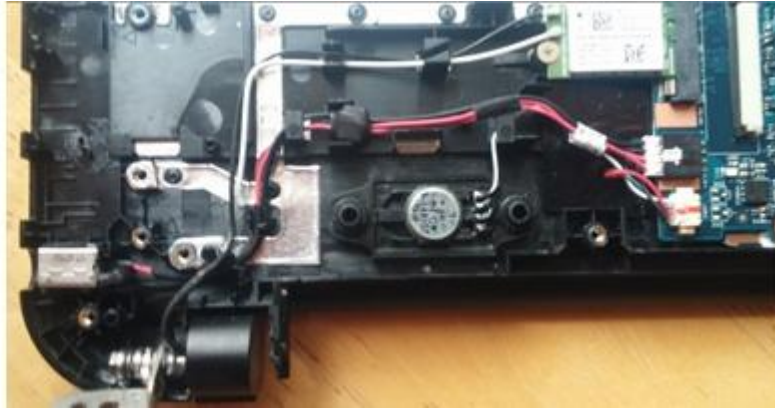

1. Remove USB mini-board

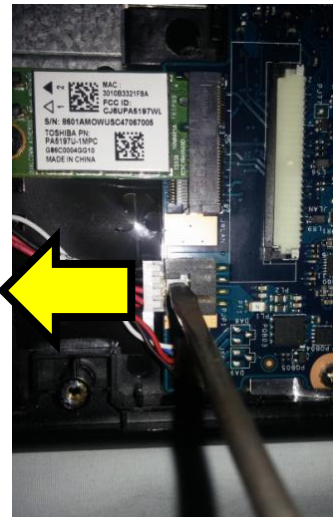

2. Use small tip screwdriver to press down and slide outboard