


Verbinding RPI met Arduino - USB-kabel

IR Break Beam Sensor Receiver - Inside IR Break Beam Sensor Sender - Inside IR Break Beam Sensor Receiver - Outside IR Break Beam Sensor Sender - Outside

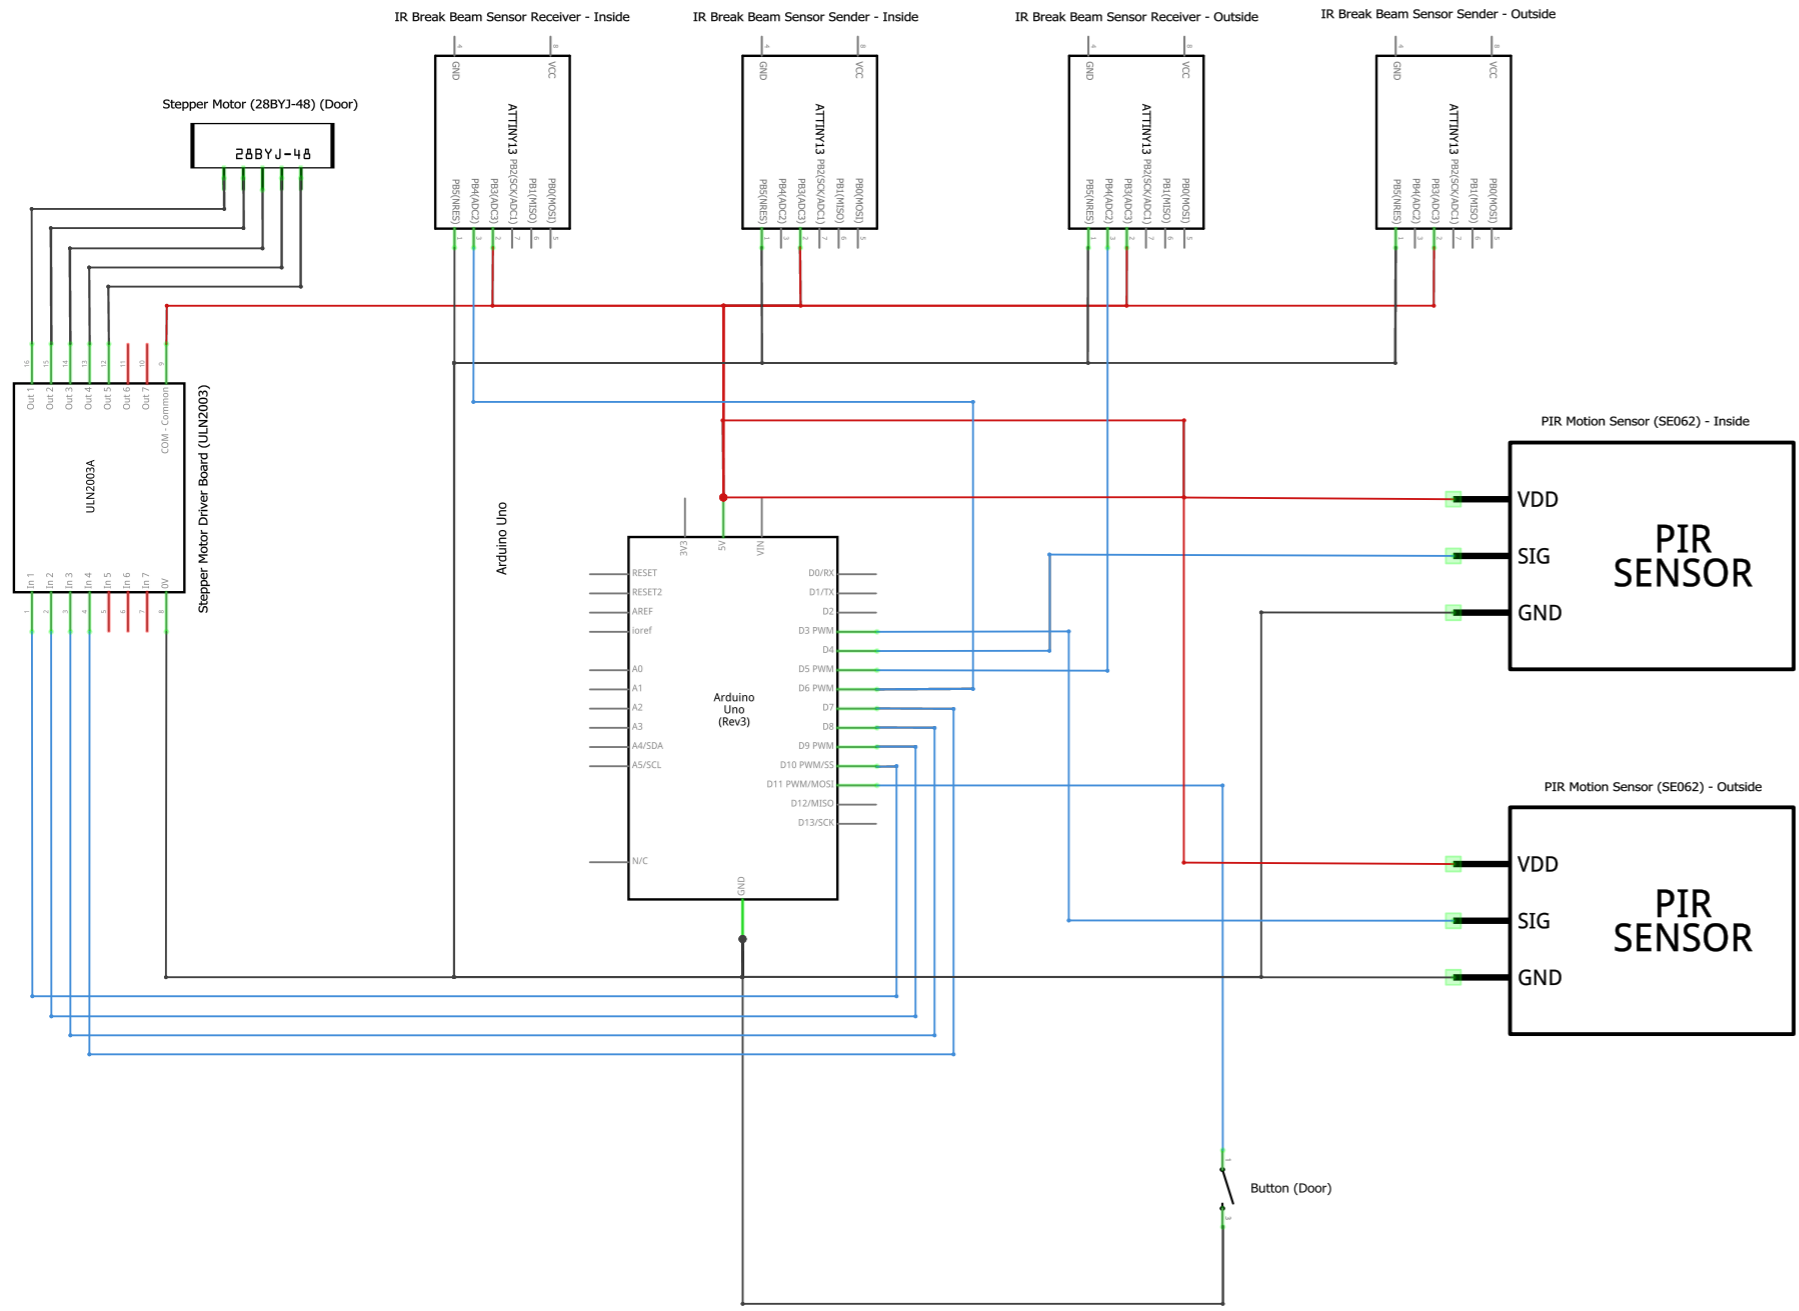

Verbinding RPI met Arduino - USB-kabel

