

Samsung remote control code

BUTTON	CODE
ON/OFF	3772802968      E0E06798
	3772802968      E0E6798
	3772793023      E0E040BF
SOURCE	3772809343 3924233868
1	377278463 3924233868
2	3772817503 3924233868
3	3772801183 3924233868
4	3772780783 3924233868
5	3772813423 392423868
6	3772797103 3924233868
7	3772788943 3924233868
8	3772821583 3924233868
9	3772805263 3924233868
0	3772811383 3924233868
VOL+	3772833823 3926807169
VOLT-	3772829743 3924233868
CH UP	3772795063 3926807169
CH DOWN	3772778743 3924233868
MUTE	3772837903 3924233868
CH LIST	3772831273
HOME	3772816993 3924233868
UP	3772778233 3924233868
DOWN	3772810873 3926807169
RIGHT	3772794553 3924233868
LEFT	3772819033 3924233868



