## THE PIANO TUNER'S POCKET COMPANION

COMPILED
FROM LECTURES OF
DLIVER C. FAUST

## OLD ENGLISH SQUARE.

- 1. Key.
- 2. Base.
- 3. Fly or jack.
- 4. Fly or jack Spring.
- 5. Regulating screw.
- 6. Under hammer.
- 7. Under hammer rail.
- 8. Hammer rail.
- 9. Damper lever.
- Damper sticker.
- 11. Damper lifter wire.
- 12. Damper.

Ť-

## Faults of the Old English.


- Keys Rattle. Remedy by wedging the punctures.
- Base unglued. Remedy: Take out key and reglue base. To remove key take out under hammer rail.
- Under hammer rattles or squeaks. Remedy: Renew the felt or leather on the under hammer. Look out for let off,
- Hammer rattles or squeaks from same cause as upright. See page 47.
- Damper rattles. Remedy: If worn renew bushing around lifter wire. If damper felt is hard, soften with felt scraper.

Lost motion is regulated by placing a piece of wrapping paper under the felt beneath the under hammer to put in lost motion.

Back checks are regulated same as Swiss. Page 83, No 17.

The dip of the old English is two eighths of an inch

Rebounding hammers are remedied by renewing the felt or leather on the under hammer. Look out for let off.

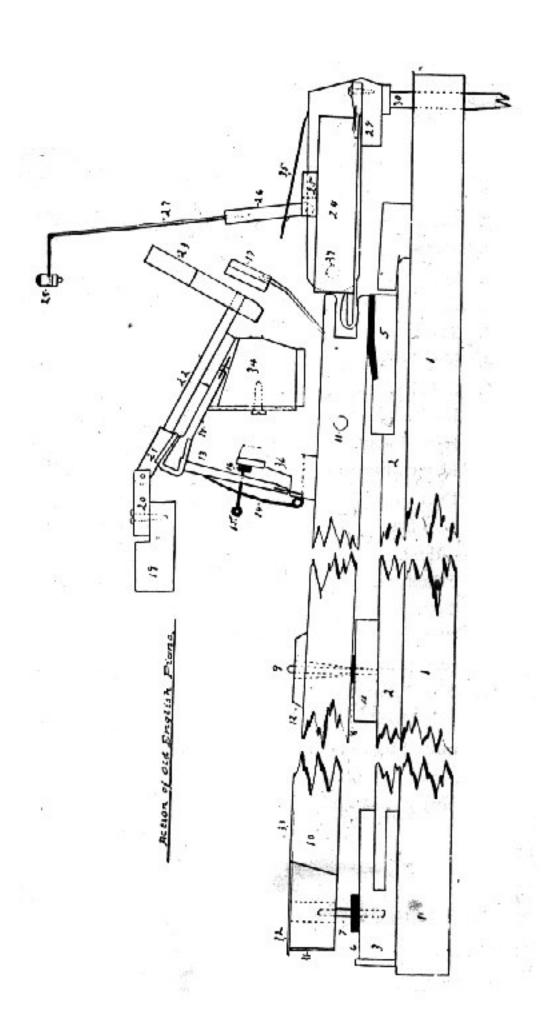

## OLD ENGLISH PIANO ACTION PARTS.

19. Hammer flange rail. 1. Key bed. 2. Key frame. 20. Hammer flange. 3. Guide or front rail. Hammer butt. Hammer shank. 4. Centre or balance Hammer head. 5. Cushion rail. 24. Damper lever. Front rail punching. Sticker flange. 7. Front rail pin. 26. Sticker. 8. Balance rail punch-Damper lifter wire. ing. Damper. 9. Balance rail pin. Damper pedal 10. Key.
11. Key lead.
12. Key button. action. Pedal sticker. 30. 31. Ivory front. 12. Key b...
13. Fly.
14. Fly spring.
15. Regulating screw.
16. Regulating screw button. 32. Ivory head. 33. Ivory tail. 34. Under hammer rail. 35. Pedal lever flange rail spring. 17. Back check. 36. Base. 37. Damper lever lead.

18. Under hammer.