
## Sequence of cuts for Scroll Saw.

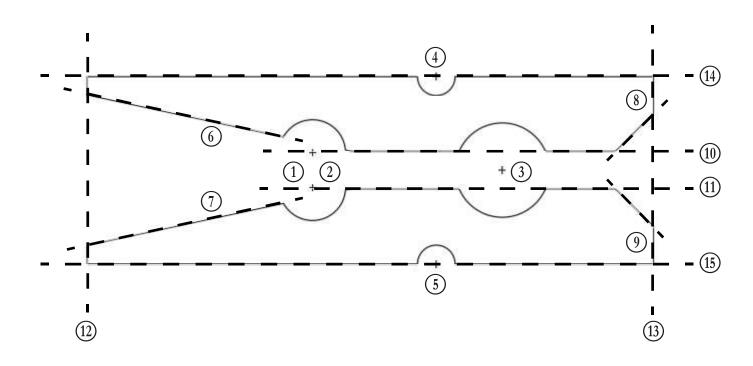

## References:

- 1) Make hole Ø3.5mm (1)(2)
- 2) Make hole Ø5mm ③
- 3) Make hole Ø2mm 4 5
- 4) Cut straight in this order 6 7 8 9 10 11 12 13 14 15

Important comment: You can also choose to cut in any other way, but believe me when it comes to cutting two tiny pieces (30mm x 4mm each) the sequence I propose will help you.