


Gun Stock and Handle

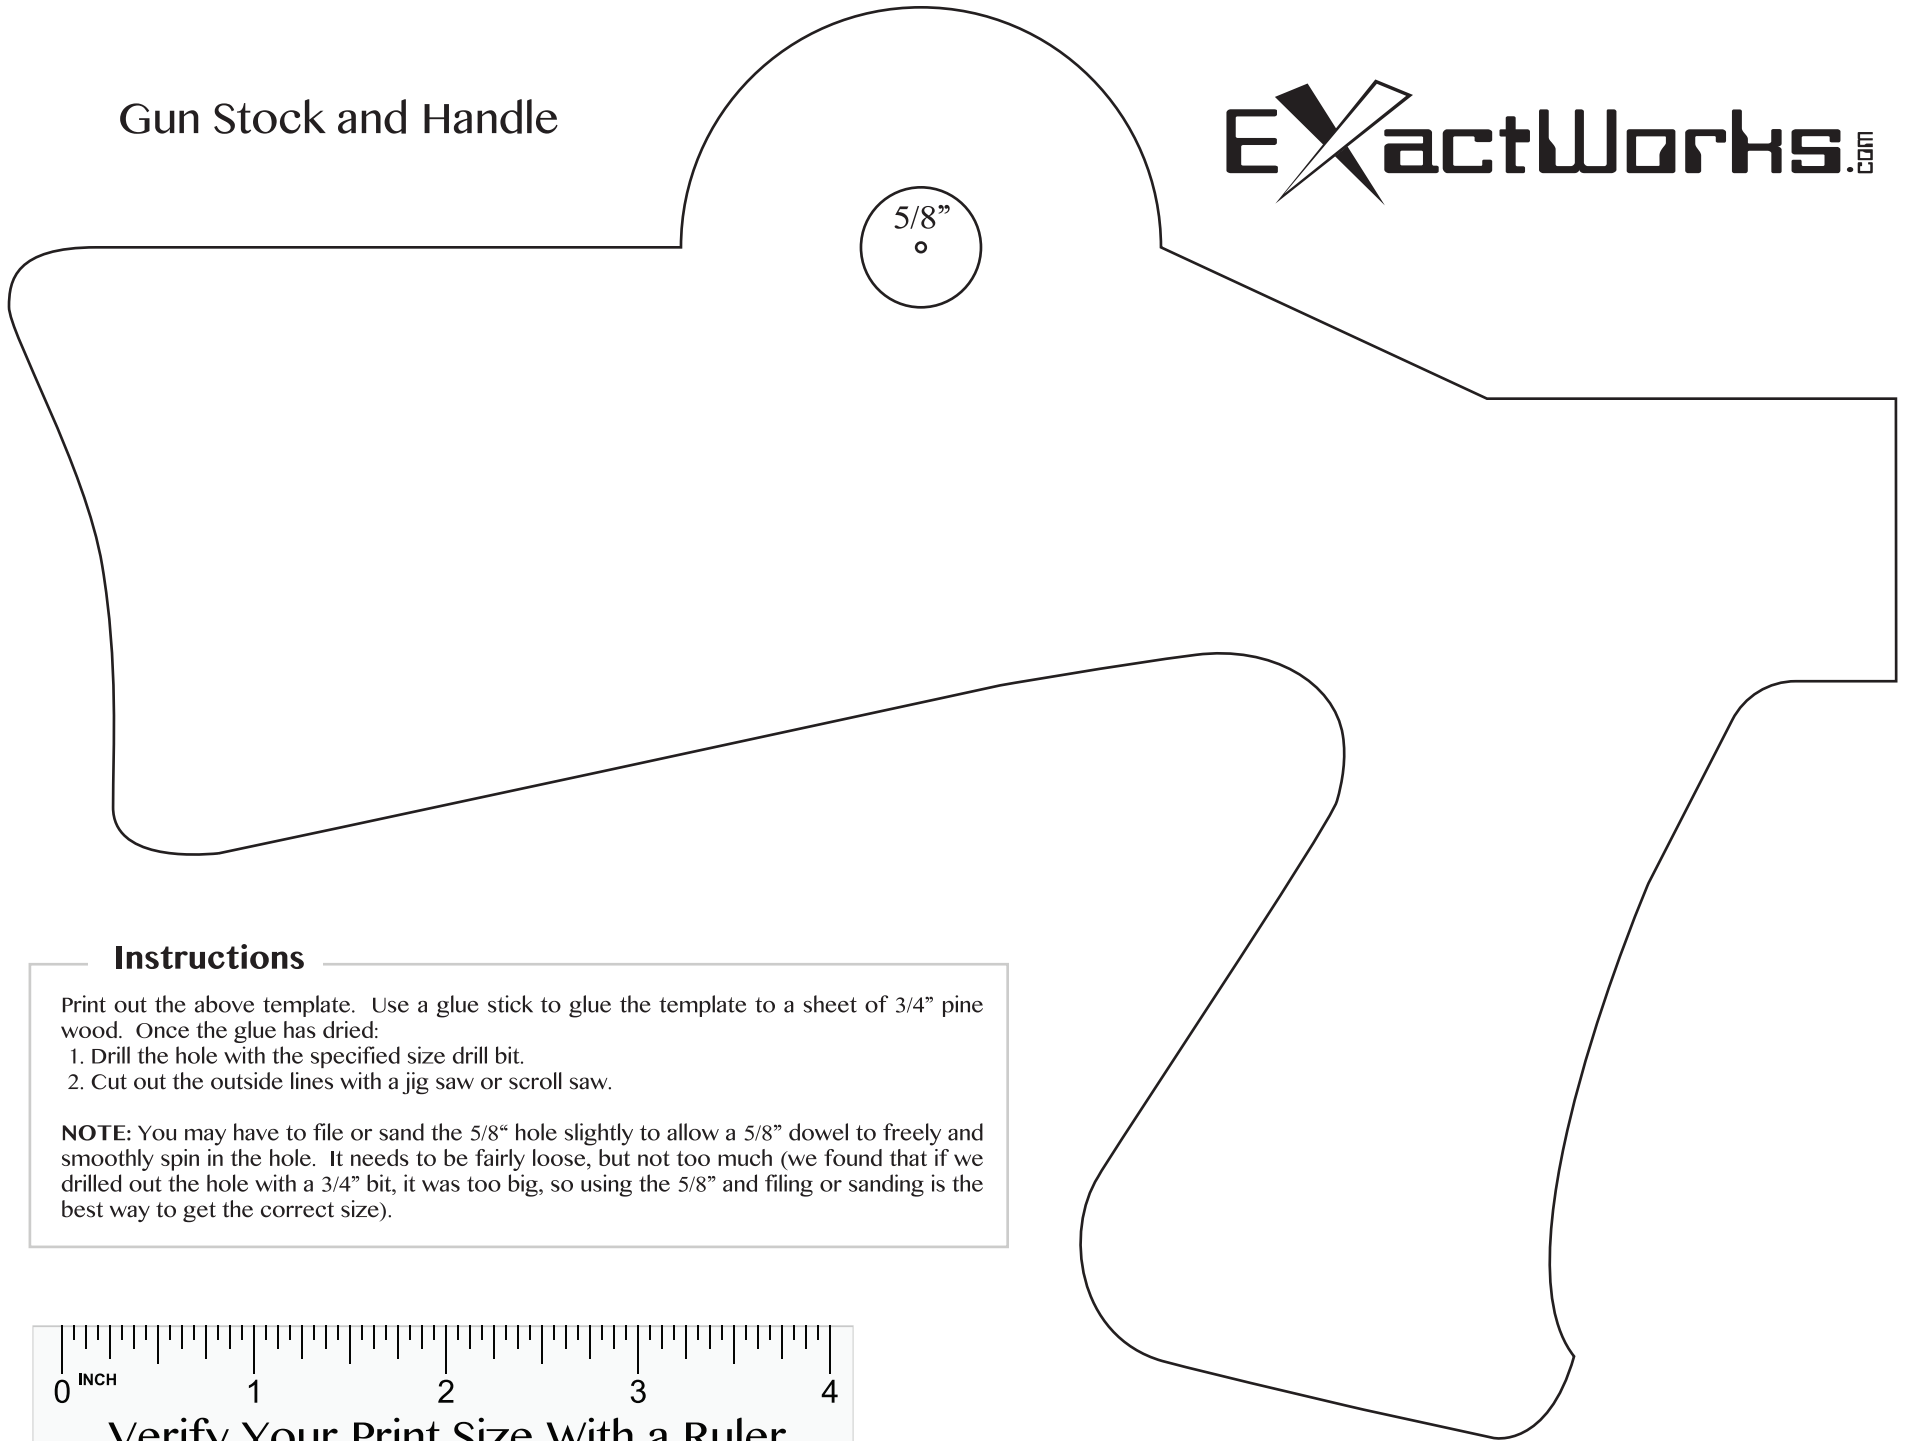


Instructions

Print out the above template. Use a glue stick to glue the template to a sheet of 3/4" pine wood. Once the glue has dried:

1. Drill the hole with the specified size drill bit.
2. Cut out the outside lines with a jig saw or scroll saw.

NOTE: You may have to file or sand the 5/8" hole slightly to allow a 5/8" dowel to freely and smoothly spin in the hole. It needs to be fairly loose, but not too much (we found that if we drilled out the hole with a 3/4" bit, it was too big, so using the 5/8" and filing or sanding is the best way to get the correct size).

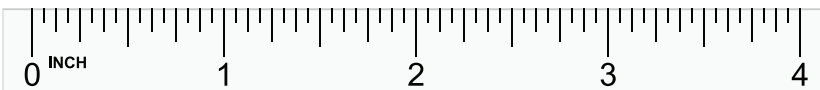

Verify Your Print Size With a Ruler