

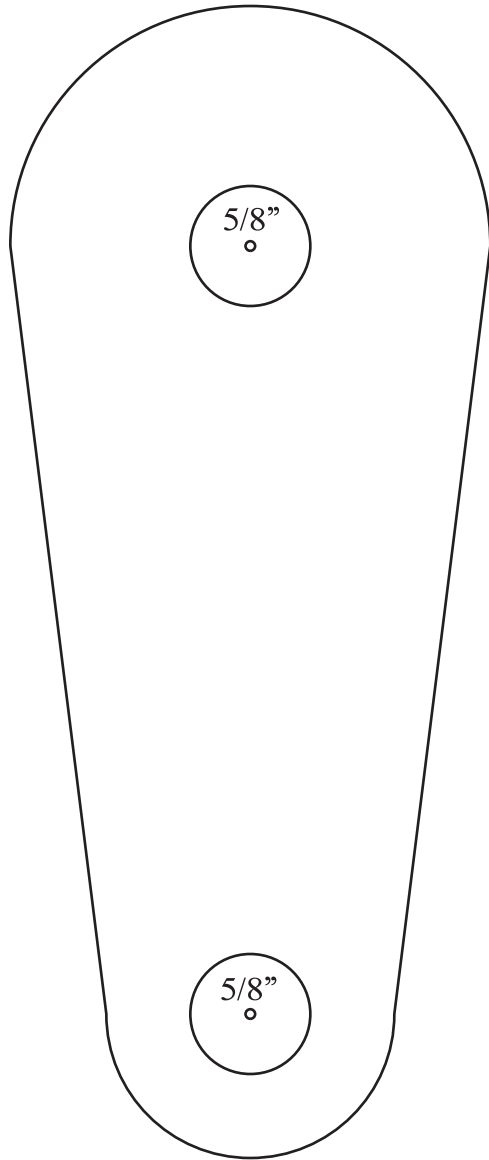


Hand Crank



Hand Crank
Spacers

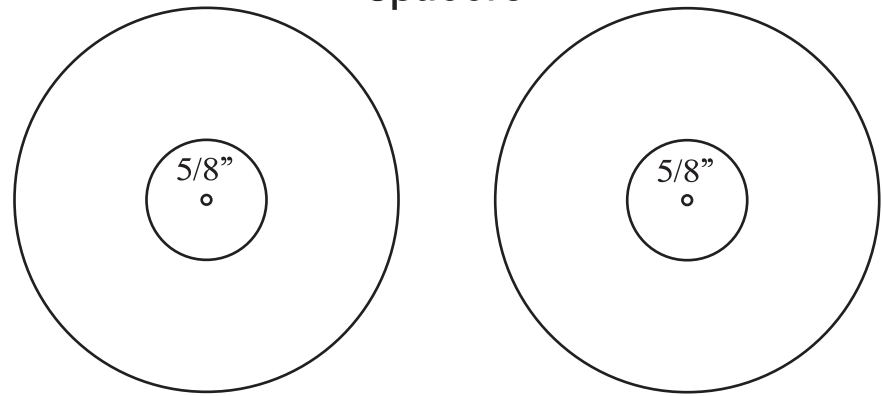

Verify Your Print Size With a Ruler

Instructions

- Print the above templates. Use a glue stick to glue the templates to a sheet of 3/4" pine wood. Once the glue has dried:
1. Drill the holes with the specified size drill bit.
 2. Cut out the outside lines with a jig saw or scroll saw.