
The PSU is pretty important here. I suggest a power supply that can handle well over what you need. 12V 12A will work but not nearly as loud.

Start with 8 or so windings on your primary and monitor your MOSFET's temperatures. Remove one turn at a time for more power.

Flyback Transformer

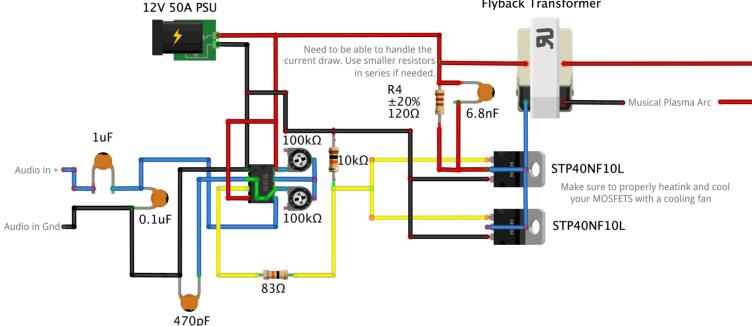

Adjust this value and the potentiometers to match your transformer's resonant frequency. Do not turn the potentiomters to either extreme You can add a small resistor in series with each pot for extra protection