





Barrel Spacers

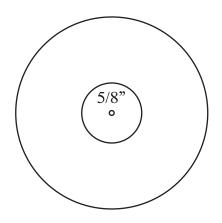

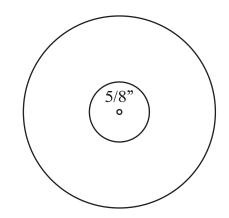

Instructions

Print the above templates. Use a glue stick to glue the templates to a sheet of 3/4" pine wood. Once the glue has dried:

- 1. Drill the holes with the specified size drill bits.
- 2. Cut out the outside lines with a jig saw or scroll saw.

NOTE: The 3/4" holes in the string guides are just there to help you cut out those areas a little easier. Without those holes, it can be tricky to get a saw blade in there to make those sharp turns.

