


inside stringer

Fasten

$3/8$ holes + $1/32$ offset out = $13/32$

less offset in .005

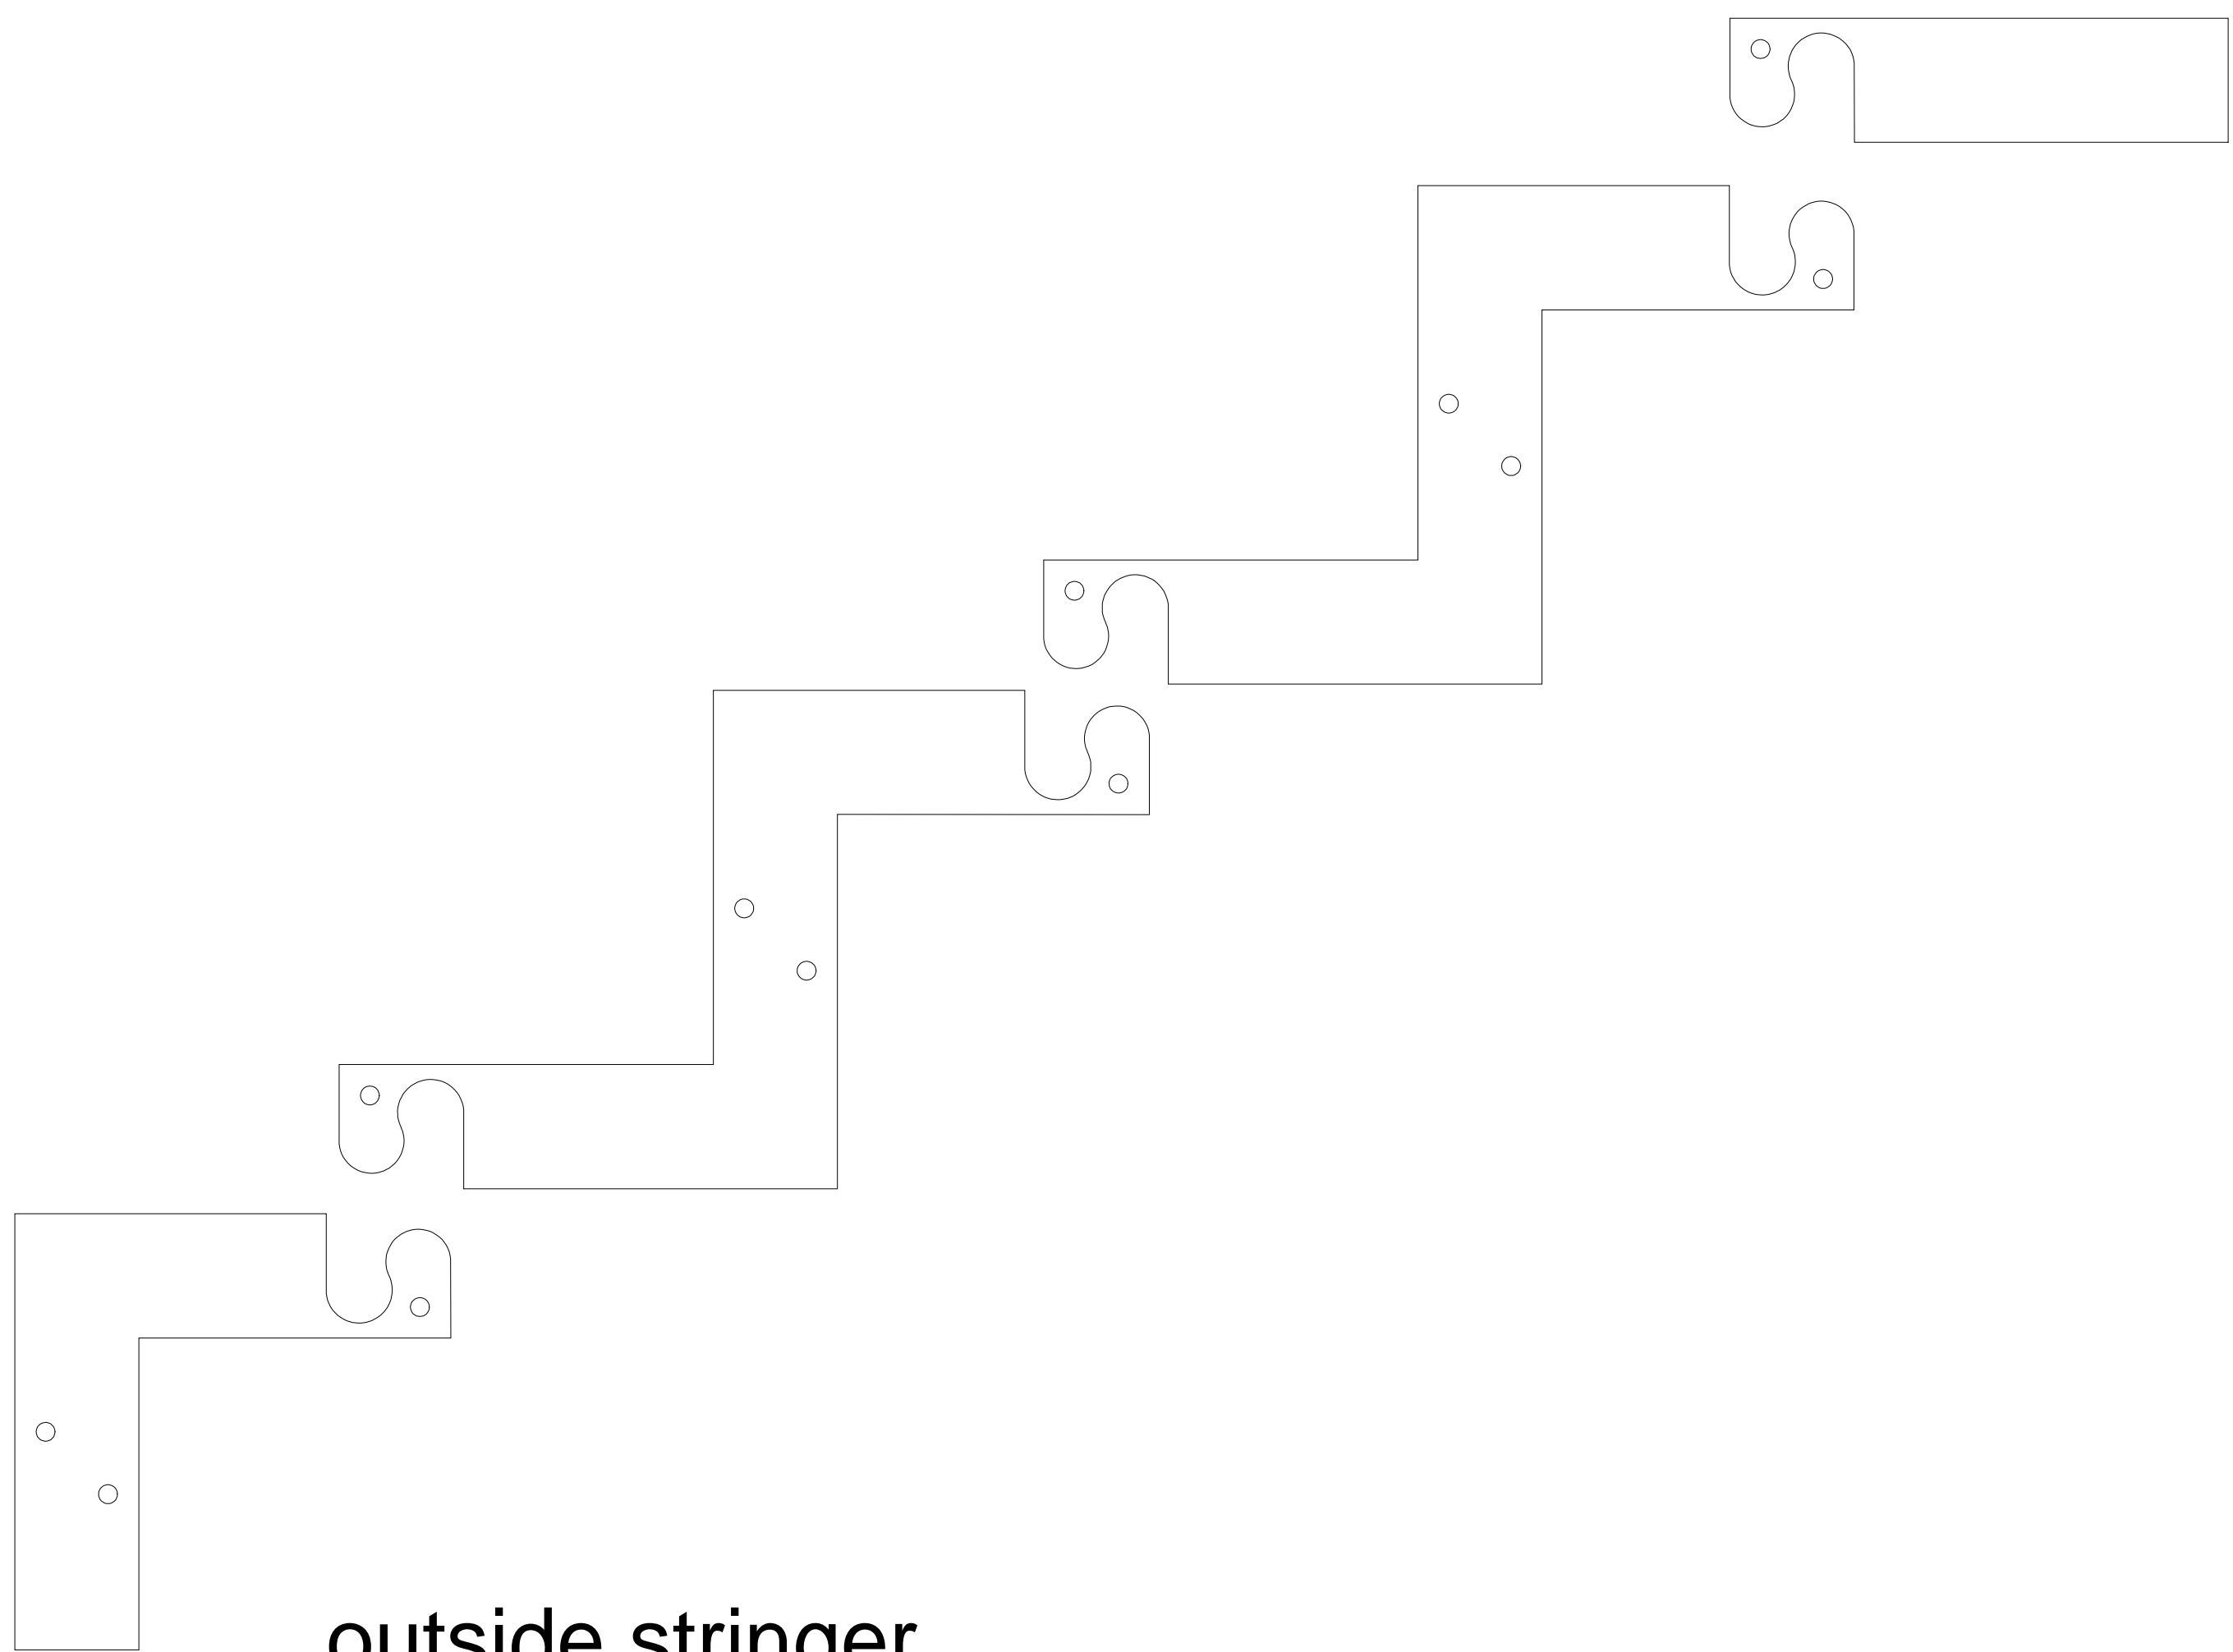


outside stringer

TAP + weld

holes $5/16$


less offset in .005

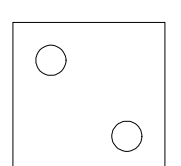

FASTEN

$3/8$ holes + $1/32$ offset out = $13/32$

less offset in .005

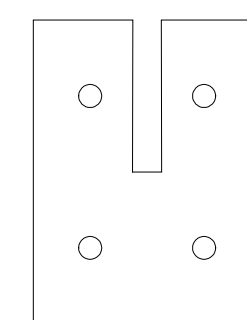

Tap + weld

holes $5/16$

less offset in .005