

# STEP TWO

FACE OF PCB

FILAMENT X 24 - FRAGILE TAKE CARE

SHORT LEAD WITH HOLE IS POSITIVE

LIGHT SIDE TOP

BEND LEAD

DARKER SIDE BOTTOM

BEND LEAD



USING HOLDER FIT TWO FILAMENTS IN - BE CAREFUL, DON'T FORCE IN. THE FILAMENT IS EASILY BROKEN




THE POSITIVE LEAD (WITH HOLE) MUST FACE INWARDS



THIS IS A COMPLETED ASSEMBLY

PLACE COMPLETED ASSEMBLY IN POSITION MARKED ON PCB


SOLDER TOP AND BOTTOM

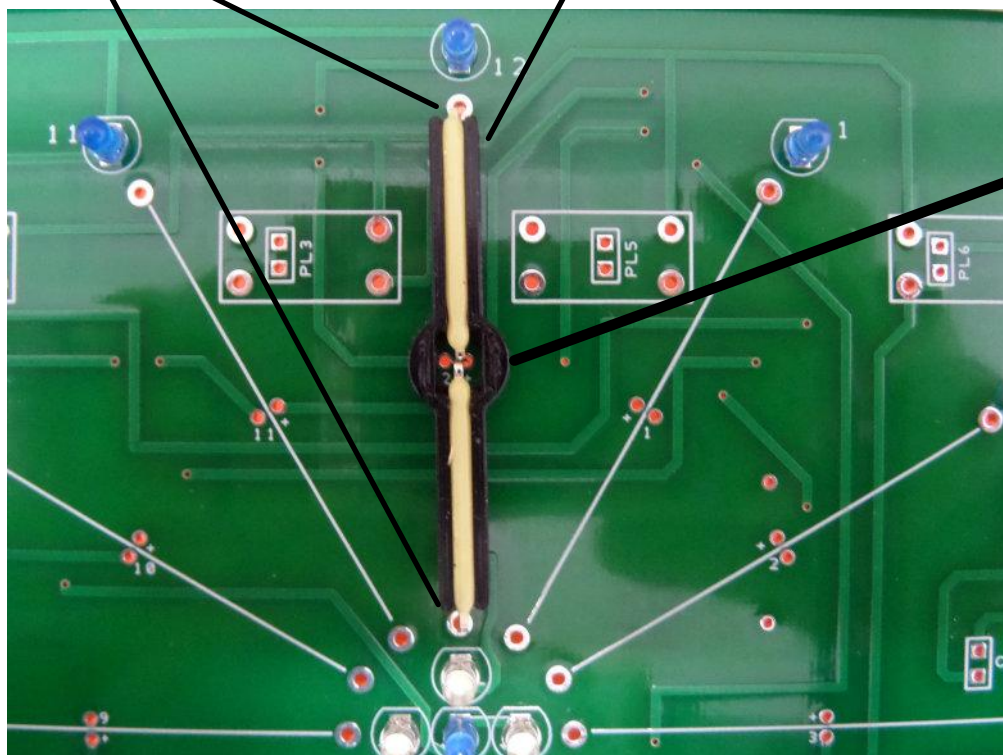

USING LED OFF-CUT BEND IN LOOP AS SHOWN



FIT LOOP INTO THE TWO HOLES EITHER SIDE OF THE FILAMENT - SOLDER THE FILAMENTS TOGETHER AND LOOP TO PCB

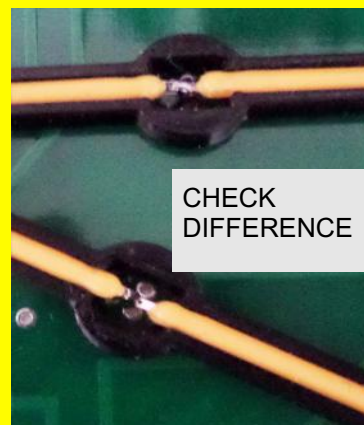

CHECK DIFFERENCE