How to build a Corbot (Corgi Robot)
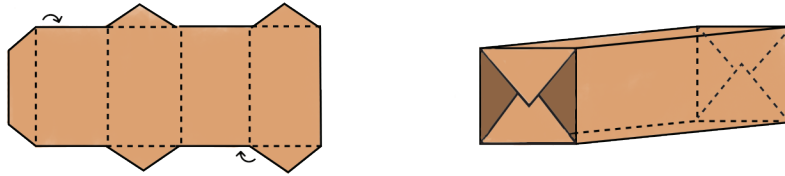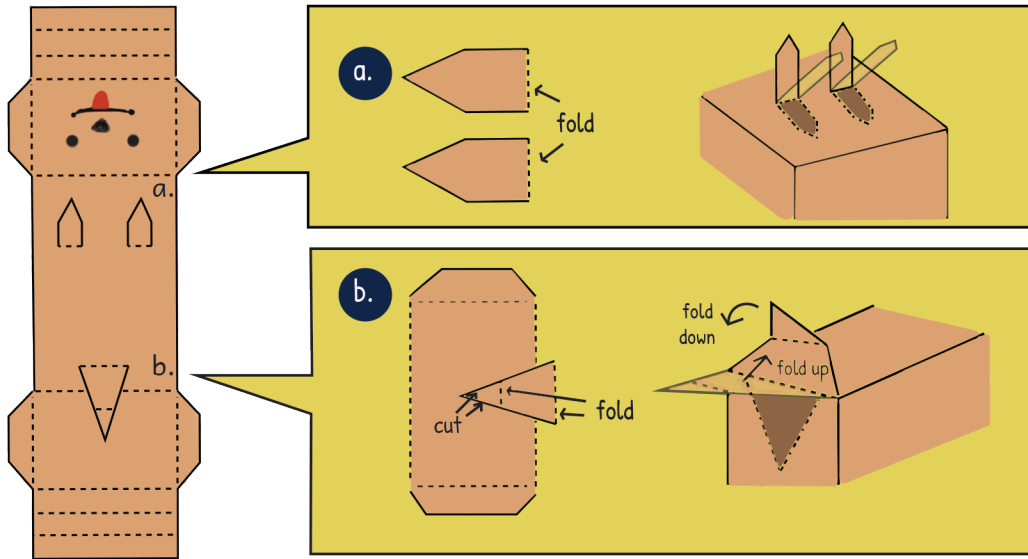
1. Cut piece A and piece B out
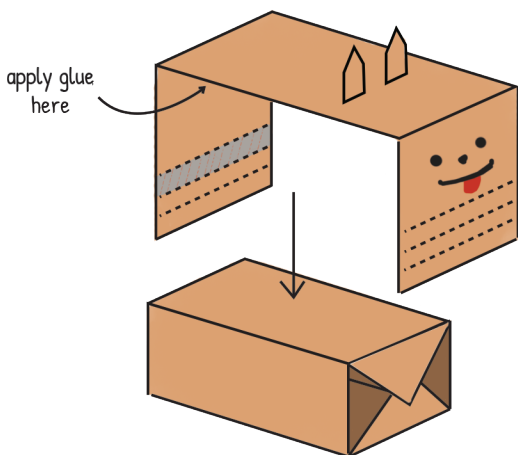
2. Assemble piece A

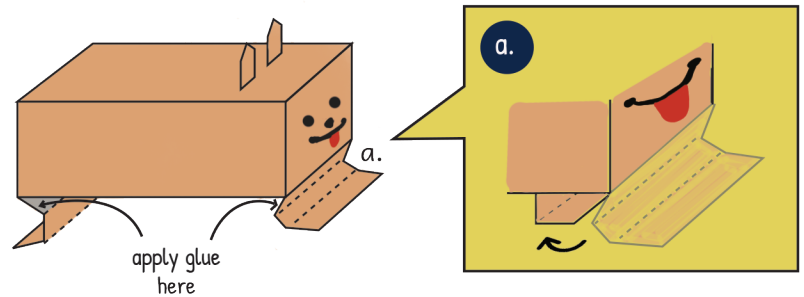

3. Assemble piece B

a.

b.

fold

fold up

fold down

cut

fold

4. Glue piece A to piece B

apply glue here

5. Apply glue to designated area and fold along the dashed lines

a.

apply glue here

Key	
——	Cut solid lines
- - -	Fold along dashed lines
▨	Area to apply glue to

A completed corbot!